

## Preset channels

<b>CH</b>	<b>RX frequency</b>	<b>TX frequency</b>	<b>QT/DQT Dec</b>	<b>QT/DQT Enc</b>	<b>Band</b>	<b>Scan</b>	<b>Busy Lockout</b>
1	446.00625	446.00625	OFF	OFF	Narrow	Yes	No
2	446.01875	446.01875	OFF	OFF	Narrow	Yes	No
3	446.03125	446.03125	OFF	OFF	Narrow	Yes	No
4	446.04375	446.04375	OFF	OFF	Narrow	Yes	No
5	446.05625	446.05625	OFF	OFF	Narrow	Yes	No
6	446.06875	446.06875	OFF	OFF	Narrow	Yes	No
7	446.08125	446.08125	OFF	OFF	Narrow	Yes	No
8	446.09375	446.09375	OFF	OFF	Narrow	Yes	No
9	446.00625	446.00625	114.8	114.8	Narrow	Yes	No
10	446.01875	446.01875	114.8	114.8	Narrow	Yes	No
11	446.03125	446.03125	114.8	114.8	Narrow	Yes	No
12	446.04375	446.04375	114.8	114.8	Narrow	Yes	No
13	446.05625	446.05625	114.8	114.8	Narrow	Yes	No
14	446.06875	446.06875	114.8	114.8	Narrow	Yes	No
15	446.08125	446.08125	114.8	114.8	Narrow	Yes	No
16	446.09375	446.09375	114.8	114.8	Narrow	Yes	No

<b>CTCSS</b>			
1 - 67.0	14 - 103.5	27 - 159.8	40 - 199.5
2 - 69.3	15 - 107.2	28 - 162.2	41 - 203.5
3 - 71.9	16 - 110.9	29 - 165.5	42 - 206.5
4 - 74.4	17 - 114.8	30 - 167.9	43 - 210.7
5 - 77.0	18 - 118.8	31 - 171.3	44 - 218.1
6 - 79.7	19 - 123.0	32 - 173.8	45 - 225.7
7 - 82.5	20 - 127.3	33 - 177.3	46 - 229.1
8 - 85.4	21 - 131.8	34 - 179.9	47 - 233.6
9 - 88.5	22 - 136.5	35 - 183.5	48 - 241.8
10 - 91.5	23 - 141.3	36 - 186.2	49 - 250.3
11 - 94.8	24 - 146.2	37 - 189.9	50 - 254.1
12 - 97.4	25 - 151.4	38 - 192.8	
13 - 100.0	26 - 156.7	39 - 196.6	

The CTCSS codes can be set only via the programming software.

<b>DCS</b>								
023	071	143	225	266	356	452	532	664
025	072	145	226	271	364	454	546	703
026	073	152	243	274	365	455	565	712
031	074	155	244	306	371	462	606	723
032	114	156	245	311	411	464	612	731
036	115	162	246	315	412	465	624	732
043	116	165	251	325	413	466	627	734
047	122	172	252	331	423	503	631	743
051	125	174	255	332	431	506	632	754
053	131	205	261	343	432	516	645	765
054	132	212	263	346	445	523	654	
065	134	223	265	351	446	526	662	

The DCS codes can be set only via the programming software.